


Zapojení RAMOS a RMS-DE-01 verze 1. – napájení senzoru z RAMOS Mini C

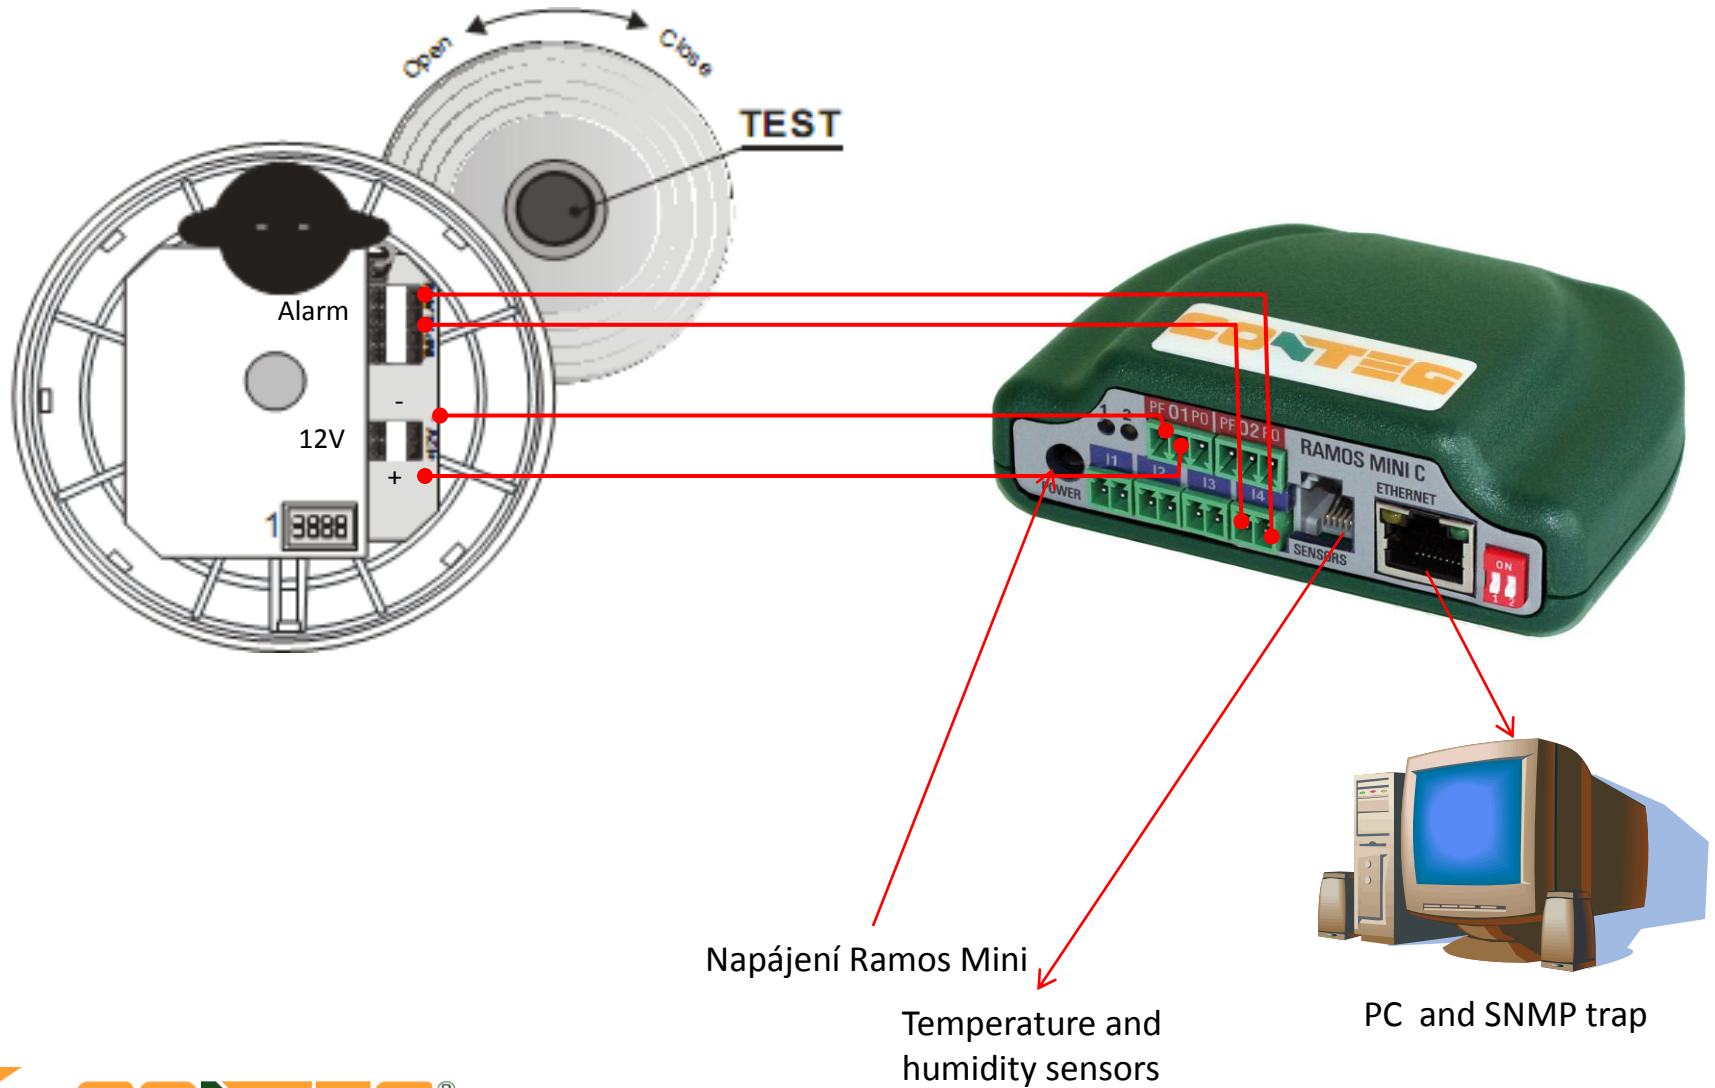

Zapojení RAMOS a RMS-DE-01 verze 1. – napájení senzoru z RAMOS Mini C

General General Setup SNMP Setup **Outputs** Sensors Email & SMS Setup Log & Time Index Page

RAMOS
MINI


Outputs Settings

Name	ID	Current Value	Output Control	Target Value	Dependent on
<input type="text" value="BinOut 1"/>	151	Off(0)	<input checked="" type="radio"/> Manual <input type="radio"/> Local Condition <input type="text" value=""/> <input type="button" value="Change to On"/>	<input type="text" value="0.0"/>	<input type="text" value=""/>
<input type="text" value="BinOut 2"/>	152	Off(0)	<input checked="" type="radio"/> Manual <input type="radio"/> Local Condition <input type="text" value=""/> <input type="button" value="Change to On"/>	<input type="text" value="0.0"/>	<input type="text" value=""/>

HW Security Protection Disabled

Zapojení RAMOS a RMS-DE-01 verze 1. – napájení senzoru z RAMOS Mini C

General General Setup SNMP Setup Outputs **Sensors** Email & SMS Setup Log & Time Index Page



Dry Contact Inputs

Dry Contact Inputs state reaction: Inactive

Name	ID	Current Value	Alarm State	Delay[s]
Binary 1	1	0 (Off)	Inactive	0
Binary 2	2	0 (Off)	Inactive	0
Binary 3	3	0 (Off)	Inactive	0
Binary 4	4	1 (On)	Active if Off	0

Sensors

Name	Sensor ID	Current Value	Safe Range	Hysteresis Idle Range	Delay [s]	Out of Safe Range SNMP Trap	Out of Safe Range Email & SMS
Temperture	51662	-999.9 °C	10.0 - 30.0	0.0	0	<input type="checkbox"/>	<input type="checkbox"/>

Apply ChangesAutodetect Sensors