Quick Installation Guide for

4Port Switch Router

A. Hardware Installation

1. Set up LAN connection:

Wired LAN connection: connect an Ethernet cable from your computer's Ethernet port to one of the LAN ports of this product.



2. Set up WAN connection:

a. connect the network cable from your cable (or DSL) modem to the WAN port of this product.

b. Connecting this product with your printer:

Use the printer cable to connect your printer to the printer port of the product.(Optional)



3. Power on:

By connecting the power cord to the power inlet and turning the power switch on, this product will automatically enter the self-test phase. When it is in the self-test phase, the indicators M1 will be lighted ON for about 5 seconds, and then M1 will be flashed 3 times to indicate that the self-test operation has finished. Finally, the M1 will be continuously flashed once per second to indicate that this product is in normal operation.

B. Configure the TCP/IP Settings of Your Computer

- 1. Install the TCP/IP protocol for your PC if it has not yet been installed. (Please refer to *User's Manual Appendix A.1.*)
- 2. From the Windows *Start* button on your PC, choose *Settings*, and select the *Control Panel* item.
- 3. Double click the *Network* icon. Select the TCP/IP line that has been associated to your network card in the *Configuration* tab of the Network window.

cheart.		Î
Cashprotor ident	Roadian Access Control	
The Automation Radio	and companying on twin	
Cleatify Mon Microsoft Fair Cours DFE-5 ThirdEU	sealt Networks Ny Logan 10TX POI Paut Elhornal Adap	Aor (Flav B)
Add. Printery Natwork,	Rynamia	Properties
Client for Microso	in Networks	1
Electric	ritene.	
Description		
		OF CONT

4. Click on the *Properties* button. Click the *IP Address* tab. Select *Obtain an IP address automatically*.

T0P//P.Poperfies	2 1		
Sedings Advanced MeBOS Ordenny WNE Configuration	DAE Configuration		
An Problems can be estimated yreary and take computer 3 your which coor inductional only estimated in the computer 3 which does not estimated by a said the type it is the spece takes			
Concern Pathens saturation			
11.			
	L Conv		

5. Click the *Gateway* tab. Clear all of the gateway settings. Click on the *OK* button.



(Note: If you want to set the *IP* of your PC manually, please refer to *User's Manual – Appendix A.2.*)

C. Configuring Your Router with a Web Browser

- 1. Activate your browser, and *disable the proxy* or *add the IP address of this product into the exceptions*. Then type this product's IP address (for example: *http://192.168.123.254*) in the *Location* (for Netscape) or *Address* (for IE) field and press ENTER.
- 2. Key in the system password (the factory default setting is "admin") in the System Password field and click on the Log in button.
- 3. Press the *Primary Setup* button and the following screen will be shown.



4. Press the *Change...* button, select the type of WAN you use, and then press the *Save* button.

- 5. Key in the proper values for the setting items shown on the page. For the meaning of the items, please refer to the online help or *User's Manual Chapter 4.4*.
- 6. After all of the items are set, press the Save button and reboot this product.

D. Use Installation CD-ROM

1. Insert the installation CD-ROM into the CD-ROM drive. The following window will be shown automatically. If it isn't, please run "install.exe" on the CD-ROM.



- 2. To read the User Manual, please click on the "User's Manual" button.
- 3. If you don't have any viewer for the User's Manual, you can execute "**rs405eng.exe**" in the "**viewer**" sub-directory to install the **Acrobat Reader 4.05**.